

It is the *installer's responsibility* to perform a bond test, prior to the installation, to ensure compatibility between the adhesive and material being installed.

1

20°C



- Store adhesive at a minimum temperature of 20°C (68°F) for 24 hours prior to installation.
- Condition material per manufacturer's recommendations.

2



- Wipe hand across surface.
- If dust transfers, substrate is not clean.
- Damp-wipe substrate if dust is present.
- Prime joint compound with latex-based primer if it is releasing dust after wiping.

3



- Any grease on substrate should be removed with a recommended ratio of 1 tsp Dawn dish soap per 32 oz (1 qt) water. Rinse off solution and let fully dry prior to the adhesive application.

4



HVAC

- HVAC must be continuously operated for a minimum of 72 hours at a temperature of no less than 20°C prior to installation.

5



- Protect from overspray with a spray shield, drop cloths, paper, or masking.

FRP

Install Guide

ADHESIVE IDEAL FOR VERTICAL INSTALLATION OF THE FOLLOWING MATERIALS


FRP • NRP • Plastic & Composite Wall Panels • LVT on Walls
Carpet Tile on Walls • Recycled Rubber • Approved Sheet Vinyl

6



- Shake aerosol can well.
- Remove safety tab.

7

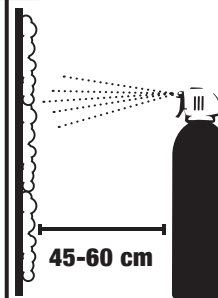

- This adhesive is delivered by a low-pressure propellant. Adhesive should spray out in a wide mist and fall similar to snow towards desired surface. Refer to spray pattern photo on back.
- Hold can upright approximately 45-60 cm from the wall, aim, and pull trigger.
- Move can back and forth spraying smoothly and evenly to achieve the results shown in the photo on the reverse side.

NOTE: *Spray only wall surface.*
It's not necessary to spray back of wall material with FRP adhesive.



NO HEAVY APPLICATION

COVERAGE
6,5 m²

**Or two 2,44 m x 1,22 m
sized panels per can**

8



- To ensure optimal spray pattern, remove any adhesive build up that may occur during the application process.

9



- If overspray occurs, it may be removed with a damp cloth while the adhesive is still wet.
- Use mineral spirits for dry overspray.

10



- Allow adhesive to dry until there is no adhesive transfer when lightly touched (10-20 min).
- High humidity and/or low temperature increases tack time.

12




- Follow manufacturer's recommendations for installation.
- Position material, ensure proper alignment before application of pressure. Reposition as necessary.

11



- Open time after application is 8 hours. While open, ensure that adhesive is not contaminated by dust.


13

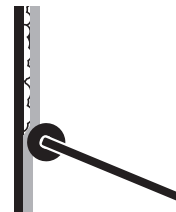

- Use manufacturer's recommendations for sealing seams and corners.
- Roll material with hand roller to complete the bonding process.

COVERAGE: 6,5 m²

Or two 2,44 m x 1,22 m sized panels per can

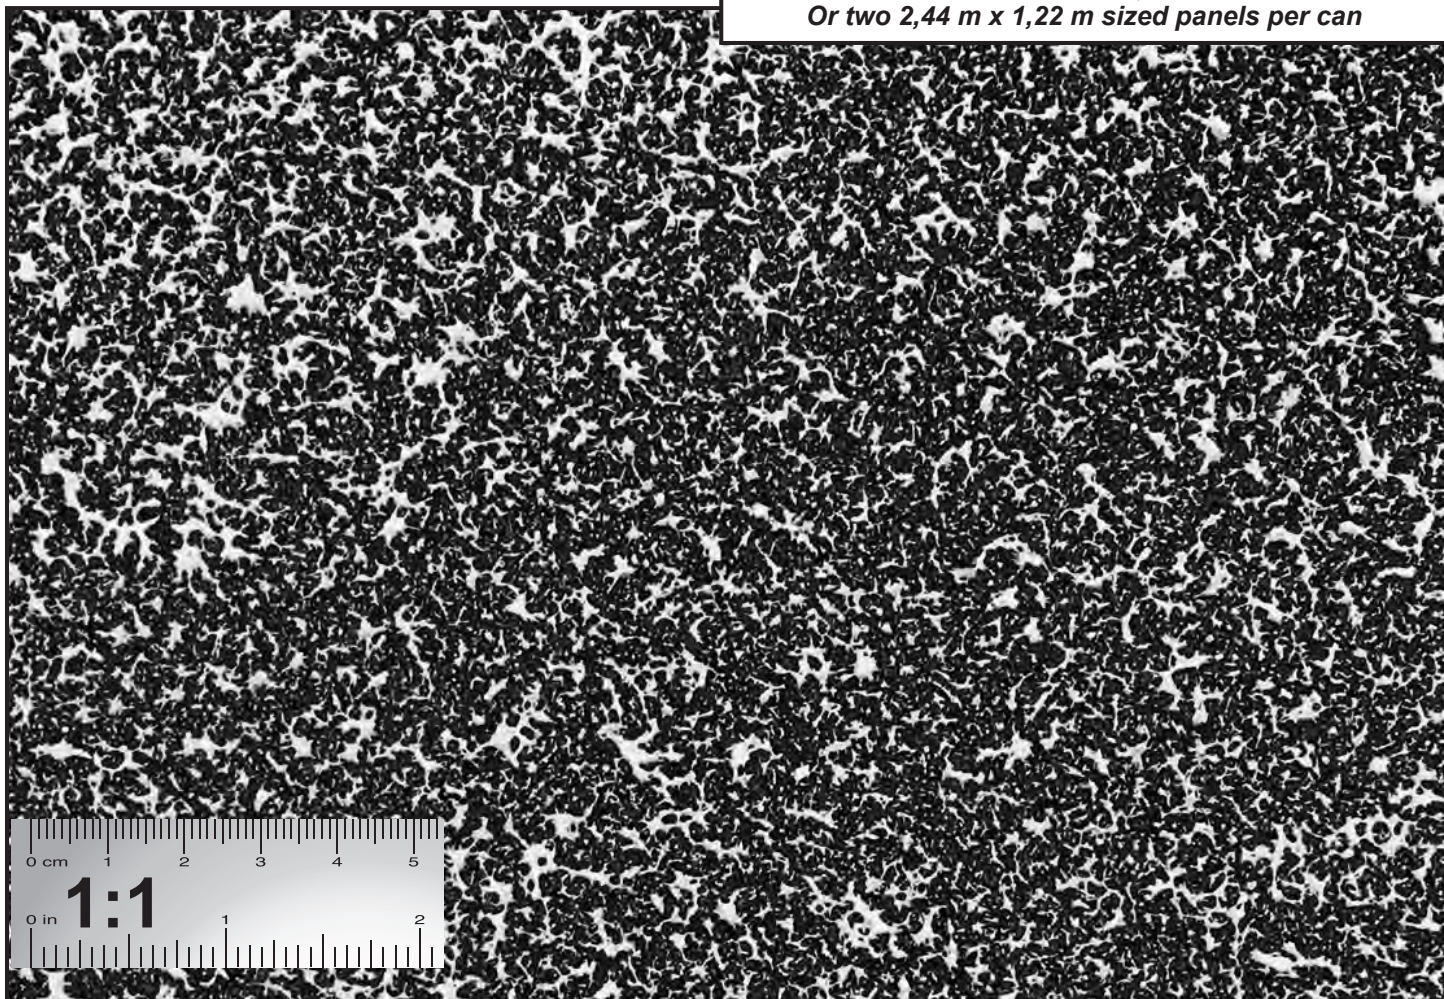

WARNING: Pressurised container: May burst if heated. If medical advice is needed, have product container or label at hand. **KEEP OUT OF REACH OF CHILDREN.** Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking. Do not pierce or burn, even after use. Protect from sunlight. Do not expose to temperatures exceeding 50°C (122°F).

FIRST AID: In case of contact with eyes, flush thoroughly with water. If irritation persists, get medical attention. For skin contact, wash with soap and water. If ingested, do not induce vomiting. Contact physician.



+0°C